

- Pre-set recipe and volume options for morning, afternoon and evening
- Variable batch volumes
- Basket safety lock during brewing
- Vacuum insulated urn for energy-efficiency and temperature retention

3/4" BSP

3/4" BSP

- Two power options
- 189 (180ml) cups per hour, per urn

# PRECISE, PROGRAMMABLE BATCH BREWER FOR HIGHER VOLUME REQUIREMENTS.




 Jet 6 2.8kW
 2.8kW
 6 L
 444 x 303 x 810


 Jet 6 5.6kW
 5.6kw
 6 L
 444 x 303 x 810


 Jet 7 win
 5.6kw
 6 L (per urn)
 444 x 614 x 810


## **JET 6 BATCH BREWER**

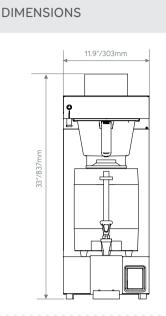

CLEARANCE

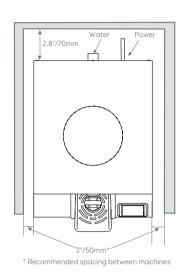

 

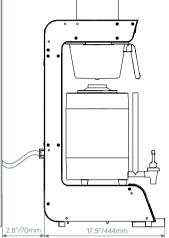

### ELECTRICAL INSTALLATION PROCEDURE

## 1000850 - 5.6kW/200-230V ac

When installing the machine, always observe the local regulations and standards. The standard machine is supplied with a UK 3-pin plug. For EU models a 2-pin CEE-7 plug will be supplied. US models will be supplied with the suitable plug. A suitable mains power supply socket should be available within easy access of the appliance so that it can be disconnected easily after install.

#### 1000851 - 2.8kW/200-230V ac

When installing the machine, always observe the local regulations and standards. The standard machine is supplied with a UK 3-pin plug. For EU models a 2-pin CEE-7 plug will be supplied. US models will be supplied with the suitable plug. A suitable mains power supply socket should be available within easy access of the appliance so that it can be disconnected easily after install.

#### PLUMBING INSTALLATION PROCEDURE

- Ensure that the equipment is installed according to local plumbing & water regulations.
- Mains water pressure required (limits): 14.5 145psi (100 - 1000kPa, 0.1 - 1MPa).
- Requires inline water filter within your water specifications.
- The machine is supplied with a 3/4" BSP connection.
- Turn on the water to flush any impurities, dust etc from the inlet hose and water pipe. Allow several litres through. Especially for new installations.
- Connect the hose to the inlet valve of the boiler. Make sure a sealing washer is fitted.
- Turn on water and check for leaks.
- The SP9 Head has a drip tray attached with a drain outlet which should be plumbed to waste.